

## Uni-Kit Resetter for Canon CLI-8 / PGI-5/ CLI-221 / PGI-220 / CLI-226 / PGI-225

### Instructions for Use

The Canon cartridges use a chip, which monitors the ink level in your cartridge. After the cartridge is empty, the chip will read empty, so when you refill the cartridge you will need to "Reset" the chip so it registers as full again.



Resetter



Adapter



Resetter+Adapter



Resetting  
(ink outlet chamber  
facing down)

Push the cartridge down so that the chip touches the contact pins of the resetter. You will see a solid red light shine through the resetter. Hold the cartridge in place, the light should stay solid red for 3-5 seconds for a successful reset.