

UNI-KIT CHIP RESETTER FOR EPSON (VERSION 5.0)

THE UNI-KIT CHIP RESETTER is used to reset the chip on an Epson ink cartridge, and does not change the property of the cartridge itself. In order to reuse an Epson ink cartridge, it needs to be both “reset” and “refilled”.

Resettable Cartridge Models: T068120* / T069120* / T069220* / T069320* / T069420* / T069520* / T077120* / T077220* / T077320* / T077420* / T077520* / T077620* / T078120* / T078220* / T078320* / T078420* / T078520* / T078620* / T007 / T008 / T009 / T015 / T016 / T017 / T018 / T0100 / T026 / T027 / T028 / T029 / T036 / T037 / T038 / T039 / T040 / T041 / T057 / T058 / T066 / T067 / T0321 / T0322 / T0323 / T0324 / T0331 / T0332 / T0333 / T0334 / T0335 / T0336 / T0341 / T0342 / T0343 / T0344 / T0345 / T0346 / T0347 / T0348 / T0422 / T0423 / T0424 / T0431 / T0441 and many more.

**For 9 pin cartridges, please follow the special instructions to the right*

Resettable Printer models:

EPSON STYLUS PHOTO: 780 / 790 / 870 / 890 / 895 / 1270 / 1280 / 1290 / 900 / 950 / 2000P / 2100 / 2200 / R260* / R280* / R380* / RX580* and more... EPSON STYLUS: C680 / 685 / 777 / 810 / 820 / 925 / 830U / C60 / C61 / C62 / C64 / C66 / CX3100 / CX3200 / C41 / C42UX / C43 / C44UX / C45 / C46 / C48 / CX1500 / C70 / C80 / C82 / C82N / C84 / CX4600 / CX5000* / CX6000* / CX5100 / CX5200 / CX5300 / CX5400 / CX6400 / CX6600 and more...

OTHER EPSON: EPSON TM-C100 / EPSON ME 100/1/1+ and more...

**For 9 pin cartridges, please follow special instructions to the right*

HOW TO USE THE UNI-KIT RESETTER

The pins on the resetter should tightly contact the terminals on the chip of the cartridge, be sure to press against the pins firmly. After a few seconds, the LED indicator will light up and flash about 2~4 times in red, if the LED turns green, it means the resetting operation has been successfully completed. If the LED turns red, it could mean that the chip on the cartridge is abnormal and not resettable. Once the cartridge has been reset, refill it and install it into the printer



Press the terminals of the cartridge chip firmly against the pins on the resetter

* IMPORTANT - FOR T068 / T069 / T077 / T078 9-PIN CARTRIDGES:



This Uni-Kit resetter will work on 9 chip cartridges, as shown on the diagram. The 4 top pins of the resetter must make contact with the 4 top terminals on the chip; the 3 bottom pins of the resetter must make contact with the 3 center terminals on the chip (you do not need to reset the 2 terminals on the chip that are to the far right or far left). Please be sure to refill the cartridge before reinstalling it into the printer.

TROUBLESHOOTING

1. The LED in the universal chip resetter does not flash/turn green. **Answer:** a). Make sure that the pins make good contact with the chip terminals b). If the design of the chip is different from OEM cartridges, the resetter may have problems trying to recognize it.

2. Cartridges with 9 terminals on the chip could not be recognized* **Answer:** For cartridges with 9 terminals on the chips (T068, T069, T077 and T078 cartridges), the printer reads more than just the chip when determining the ink level status for the cartridge. The printer also reads ink level sensors INSIDE the cartridge, so the cartridge needs to be both properly resetted AND properly refilled in order for the printer to recognize it as full.